

	I I		J		
SIONS ARE mm, () DENOTES INCHES.					1
ENOTES WIRING BY CUSTOMER. ALL WIRING MUST NE IN CONJUNCTION WITH APPROVED CONDUIT, GS, AND BOXES ALSO IN ACCORDANCE WITH ALL					-
NING REGULATIONS.					2
HE TRANSDUCER CABLE IN A GROUNDED METAL JIT, SEPARATE FROM OTHER WIRING. (EXCEPT TS-3 LICABLE) DO NOT USE A COAXIAL TRANSDUCER EXTENSION. DO NOT CONNECT THE SHIELD AND TRANSDUCER WIRES TOGETHER. REFER TO					-
`A' FOR TRANSDUCER CABLE EXTENSIONS.					3
S-3 TEMP. SENSORS ARE TO BE USED. DO NOT R TERMINALS IF TS-3 IS NOT USED.					-
MOUNTING TWO OR MORE UNITS IN THE SAME SYNCHRONIZE THE UNITS BY INTERCONNECTING NC TERMINALS. (TB3 20 - SYNC).					4
TO SPECIFIC SMARTLINX MANUAL IF MODULE D.					-
TO INSTRUCTION MANUAL FOR SPECIFIC CTION OF EACH TYPE OF COMMUNICATIONS. JM DISTANCE BETWEEN UNITS AND CUSTOMER					5
E IS 3 m (9.8 FT) FOR RS-232 AND 1200 m (4000 FT) S-485.					-
IRTHER INFORMATION REFER TO THE PRIATE INSTRUCTION MANUAL OR CONTACT SIEMENS MILLTRONICS REPRESENTATIVE.					6
SIEMENS MILLINONIOS HEI HESENIAITVE.					-
					7
					_
					8
FOR CONSTRUCTION		RPC	SM	SEPT 25/03	
			Appr.	Date	-
	Tolerance Unless Otherwise Noted: UOS 1 Place Decimal ± 0.03 Angles: 2 Place Decimal ± 0.01 ± 0.5° 3 Place Decimal ± 0.002 BNTS B				9
	TITLE: MULTIRANGER / HYDRORANGER 100 / 200 PANEL MOUNT OUTLINE AND CONNECTION DRAWING				_
NC.	DRAWING No: 23650454 0			10	
	Plot at: 1:1 Sheet 1 Of 1				
					-