

SmartLine Pressure

Honeywell




SmartLine
Configuration
Pocket Guide

Basic Display Menu

Parameter	Applicability	Locally Writable
LCD Contrast	Always	Yes
Rotation Time	FF Only	Yes
PV Display	HART/DE	Yes
PV Decimals	HART/DE	Yes
Pressure Units	HART/DE	Yes
Range/Cal Units	FF Only	Yes
Zero Correct	Always	Yes
LRV Correct	HART/DE	Yes
URV Correct	HART/DE	Yes
Reset Corrects	HART/DE	Yes
DAC Zero Trim	HART/DE	Yes
DAC Span Trim	HART/DE	Yes
Loop Test	HART/DE	Yes
LRV	Always	HART/DE
URV	Always	HART/DE
Damping	Always	HART/DE
NAMUR	HART/DE	Yes
Filter Perf	HART Only	Yes
Transfer Func	HART/DE DP Only	Yes
Flow Cutoff	HART/DE DP Only	Yes
Flow Breakpoint	HART/DE DP Only	Yes
Tag ID	HART/DE	Yes
Install Date	HART/FF	HART Only
Firmware	Always	Yes
Protocol	Always	Yes
Model Key	Always	Yes
Exit Menu	Always	N/A

Advanced Graphic Display Menu

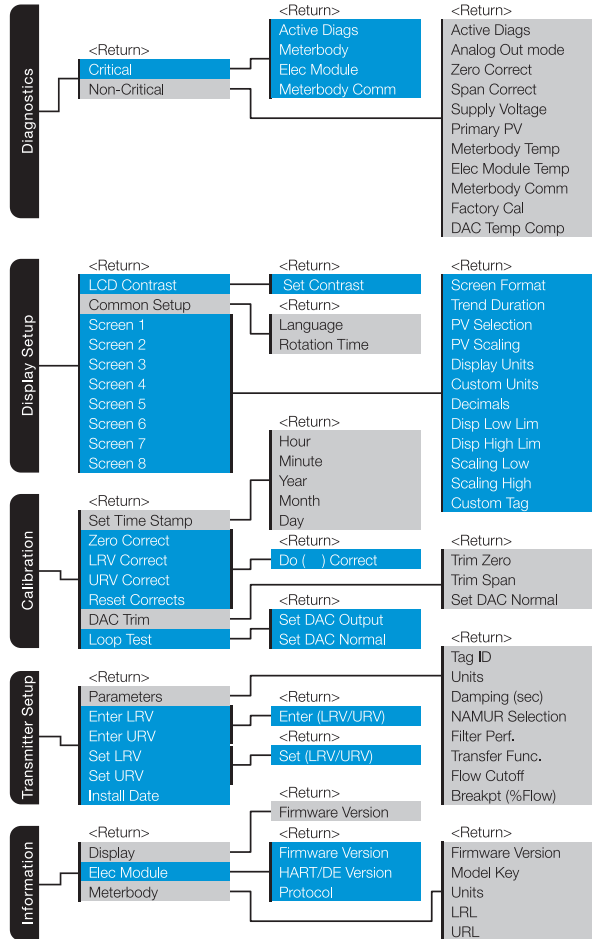

Basic Display Menu


1 Damping

Advanced Graphic Display Menu

Main Menu

<Exit>
Diagnostics
Display Setup
Calibration
▼

Configuration Keypad

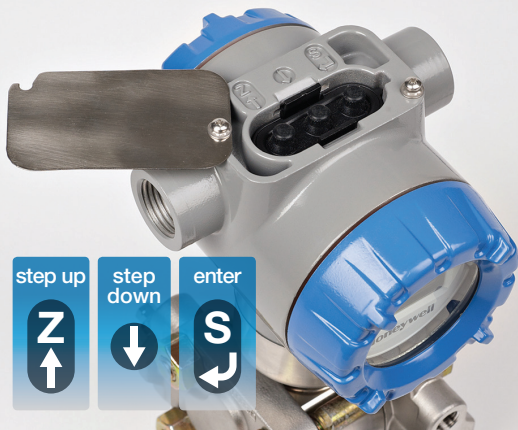

Honeywell Process Solutions

Honeywell

512 Virginia Drive
Fort Washington, PA 19034 USA

www.honeywellprocess.com

34-ST-00-121, Rev.1

October 2012 ©2012 Honeywell International Inc.