

DirectLine® DL422 Sensor Module *for Meredian® II ORP Electrodes* **User Manual**

70-82-25-107

Rev. 2

1/03

Notices and Trademarks

Copyright 2003 by Honeywell
Revision 2 January 2003

Warranty/Remedy

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Contact your local sales office for warranty information. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace without charge those items it finds defective. The foregoing is Buyer's sole remedy and is **in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose**. Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Industrial Measurement and Control

Honeywell
1100 Virginia Drive
Fort Washington, PA 19034

DirectLine is a registered trademark of Honeywell

Meridian is a U.S. registered trademark of Honeywell

Other brands or product names are trademarks of their respective owners

Insert 70-82-10-02 should accompany this document.

About This Document

Abstract

This manual contains all the information that is needed to install, configure, calibrate, operate, and troubleshoot the DirectLine® Sensor. Insert 70-82-10-02, a quick reference guide for configuring and calibrating the DL422, should accompany this document.

Contacts

World Wide Web

The following lists Honeywell's World Wide Web sites that will be of interest to our customers.

Honeywell Organization	WWW Address (URL)
Corporate	http://www.honeywell.com
Industrial Measurement and Control	http://www.honeywell.com/imc
International	http://www.honeywell.com/Business/global.asp


Telephone

Contact us by telephone at the numbers listed below.

Organization		Phone Number	
United States and Canada	Honeywell	1-800-423-9883	
		(215) 641-3610	<i>Tech. Support</i>
		1-888-423-9883	<i>Q&A Faxback (TACFACS)</i>
		1-800-525-7439	<i>Service</i>

Symbol Definitions

The following table lists any symbols used in this document to denote certain conditions.

Symbol	Definition
	Earth Ground. Functional earth connection. NOTE: This connection shall be bonded to Protective earth at the source of supply in accordance with national and local electrical code requirements.

Contents

1. INTRODUCTION	1
1.1 Overview	1
1.2 Electronics Module	2
1.3 Operator Interface.....	2
1.4 Specifications.....	3
1.5 Model Selection Guide	4
2. INSTALLATION	5
2.1 Assembly and Wiring.....	5
2.2 Integral Mounting	7
2.3 Remote Mounting	8
2.4 Conduit connections	10
3. CONFIGURATION	11
3.1 Overview.....	11
3.2 Configuration Set Up Procedure.....	12
4. CALIBRATION.....	14
4.1 Calibration Diagnostics	14
4.2 Calibration Diagnostic Reset	14
4.3 Calibration.....	14
5. OPERATION	17
5.1 Displays	17
5.2 Diagnostic Error Messages	18
5.3 Unit Reset.....	19
6. SPARE PARTS	20
7. SALES AND SERVICE	21

Tables

Table 2-1	Assembly and Wiring Procedure for Field Wiring Connector	6
Table 2-2	Integral Mounting Procedure for ORP Electrodes	7
Table 2-3	Remote Mounting Procedure for ORP Electrodes	8
Table 3-1	Configuration Set Up Procedure	12
Table 4-1	Oxidation-Reduction Potential of Reference Solutions at Specified Temperature	15
Table 4-2	Zero (Standardization) Calibration Procedure	16
Table 5-1	Online Parameter Descriptions	17
Table 5-2	Display Navigation Procedure	17
Table 5-3	Online Diagnostic Errors	18
Table 5-4	Factory Default Values	19

Figures

Figure 1-1	DirectLine® Sensor	1
Figure 1-2	Electronics Module	2
Figure 2-1	Cordset Connection and Wiring	5
Figure 2-2	Field Wiring Connector	6
Figure 2-3	Integral Mounting	7
Figure 2-4	Remote Mounting	9
Figure 2-5	Remote Mounting Hardware	10

1. Introduction

1.1 Overview

The DirectLine® Sensor consists of an electronics module connected to a Meridian II ORP electrode that eliminates the need for pre-amps, transmitters, and analyzers in ORP applications.

The modular electronics design can be separated from the electrode, allowing the electrode to be easily removed or replaced while retaining power to the electronics module.

The DL422 **electronics module** is contained in a Nema Type 4x polysulfone housing. The Module can be mounted as an integral unit directly connected to the electrode or remotely using an electrode with a cable. The sealed polysulfone housing has plug-in connections for the Meridian II ORP probe and 4-20 mA output connection.

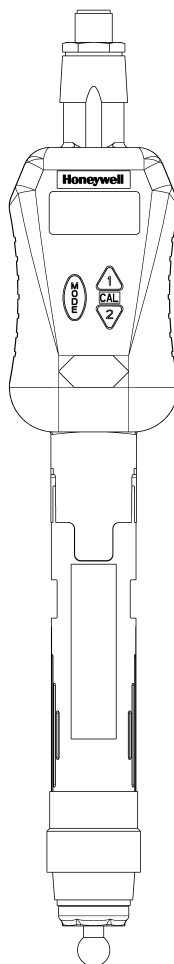


Figure 1-1 DirectLine® Sensor

1.2 Electronics Module

The electronics module is loop-powered by 16-42 Vdc and will modulate its supply current from 4 mA to 20 mA, depending upon the ORP value that is measured by the Meridian II electrode.

A 4-20 mA output connection is provided via a 6m cordset or a customer supplied cable used in combination with a field wiring connector.

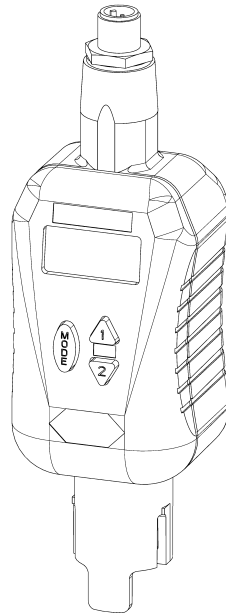


Figure 1-2 Electronics Module

1.3 Operator Interface

The DirectLine® Sensor operator interface consists of three pushbuttons and one 4-digit, 7-segment LCD display with 3 decimal points, plus (+), and minus (–) signs. It is responsible for the display of measured values and configuration of parameter values.


1.4 Specifications

Displayed ORP	-1600 mV to +1600 mV
Meridian Sensor Survivable Temperature Range	-10 °C to +130 °C (14 °F to 266 °F)
Electronics Module Ambient Temperature	-20 °C to +85 °C (-4 °F to +185 °F)
Output Type	4-20 mA (2-wire loop powered)
Output Scale	-1600 mV to +1600 mV
Output Calibration	4-20 mA
Output Cordset	Shielded twisted pair, length 6 m (19.7')
User Termination	Tinned leads
Sensor Cable Length	3.65 m (12') or 6.096 m (20')
Power	16-42 Vdc <i>Maximum load resistance:</i> 250 ohms at 16 Vdc 600 ohms at 24 Vdc 1400 ohms at 42 Vdc
Local Display and Buttons	LCD 4-digit, 7-segment
Engineering Units	mV
Calibration Options	1 point Sample
Diagnostics	Sensor and electronics
Case	Weatherproof, corrosion-resistant plastic housing
Approvals	CE Mark for Industrial Applications UL – General Purpose for Process Control CSA – General Purpose FM – CLI, DIV1, Groups C & D and CLI, Zone 0 AEx ia IIB (IS) FM – CLI, DIV2, Groups C & D and CLI, Zone 2, Groups IIB (N.I. Field Wiring)
Remote Mounting	Pipe, Wall, or DIN Rail
Dimensions	H 123 mm (4.84") x W 48 mm (1.89") x D 46 mm (1.81")
Weight	Approximately 142 g (5.0 oz.)

1.5 Model Selection Guide

Instructions

- Select the desired key number. The arrow to the right marks the selection available.
- Make the desired selections from Tables I through IV using the column below the proper arrow. A dot (•) denotes availability.



Key Number - DirectLine® Sensor Electronics Module

(Specify electrodes/cells/probes separately)

		Selection	Availability				
pH	For use with Durafet II, Meredian II & HPW7000 pH electrodes	DL421	↓				
ORP	For use with ORP electrode.	DL422		↓			
Conductivity	For use with Contacting Conductivity Cells	DL423			↓		
DO - PPM	For use with Dissolved Oxygen ppm Probes	DL424				↓	
DO - PPB	For use with Dissolved Oxygen ppb Probes	DL425					↓

TABLE I - OUTPUT CABLE

Output Cable for Integral or Remote Mounting	Description	D	E	F
None (replacement module or customer supplied output cable)- Note 1		•	•	•
Cordset - 6m (19.7 ft.) - includes connector and cable - Note 2		•	•	•
Field Wiring Connector only - customer supplies cable only- Note 2		•	•	•

TABLE II - SENSOR CABLE/REMOTE CONNECTOR (between electronic module and electrode, sensor or probe)

Mounting	Description	0	1	2	3	4	5	6
Integral Mounting	No cable or connector required	d	d	d	d	d		
Remote Mounting Cable - Durafet only	6,096m (20 ft.) of sensor cable - Durafet II Remote Mounting	e						
	15,24m (50 ft.) of sensor cable - Durafet II Remote Mounting	e						
Remote Mounting Connector (Cable is supplied with sensor or probe)	Remote Mounting Connector - Meredian II pH	e						
	Remote Mounting Connector - Meredian II ORP		e					
	Remote Mounting Connector - HPW7000	e						
	Remote Mounting Connector - Conductivity				e			
	Remote Mounting Connector - Dissolved Oxygen						e	e

TABLE III - REMOTE MOUNTING OPTIONS

Mounting Kit for Remote Mounting	Description	A	B
None Integral unit - mounting not required		•	•
2" (5,08 cm) Pipe mtg. bracket, wall mtg. & DIN Rail clip		•	•

TABLE IV - OPTIONS

Option	Description	00	LT	SS	00	CC
Tagging	None	•	•	•	•	•
	Linen Customer ID Tag - 3 lines w/22 characters/line	•	•	•	•	•
	SS Customer ID Tag - 3 lines w/22 character/line	•	•	•	•	•
Certificates	None	•	•	•	•	•
	Calibration & Conformance	•	•	•	•	•

Notes:

- Customer supplies cordset or cable with M12 connector. Suppliers & P/Ns include:

	Phoenix Contact	Turck
Cord--set	SAC-3P-5.0-PUR/M12FSSH Stainless	RKV4T-6/S618
M12 Field Wiring Connector	SACC-M12FS-4CON-PG7	B8141-0
Cable	2-wire twisted shielded pair	

- Recommended cable is 2-wire twisted shielded pair

RESTRICTIONS

Restriction Letters	Available Only With		Not Available With	
	Table	Selection	Table	Selection
d	III	A		
e	III	B		

ORDERING INSTRUCTIONS:

- Part numbers are provided to facilitate Distributor Stock.
- Orders may be placed either by model selection or by part number.
- Part numbers are shown within the model selection tables to assist with compatibility information.
- Orders placed by model selection are systematically protected against incompatibility.
- Compatibility assessment is the responsibility of the purchaser for orders placed by part number.
- Items labeled as N/A are not available via the stocking program and must be ordered by model selection.

2. Installation

2.1 Assembly and Wiring

Depending on the customer selected output cable options, the DirectLine can be wired to an appropriate 16-42 Vdc source using 2 different methods:

- 1) Cordset. See Figure 2-1.
- 2) Field wiring connector with customer supplied cable. See page 6.

2.1.1 Cordset

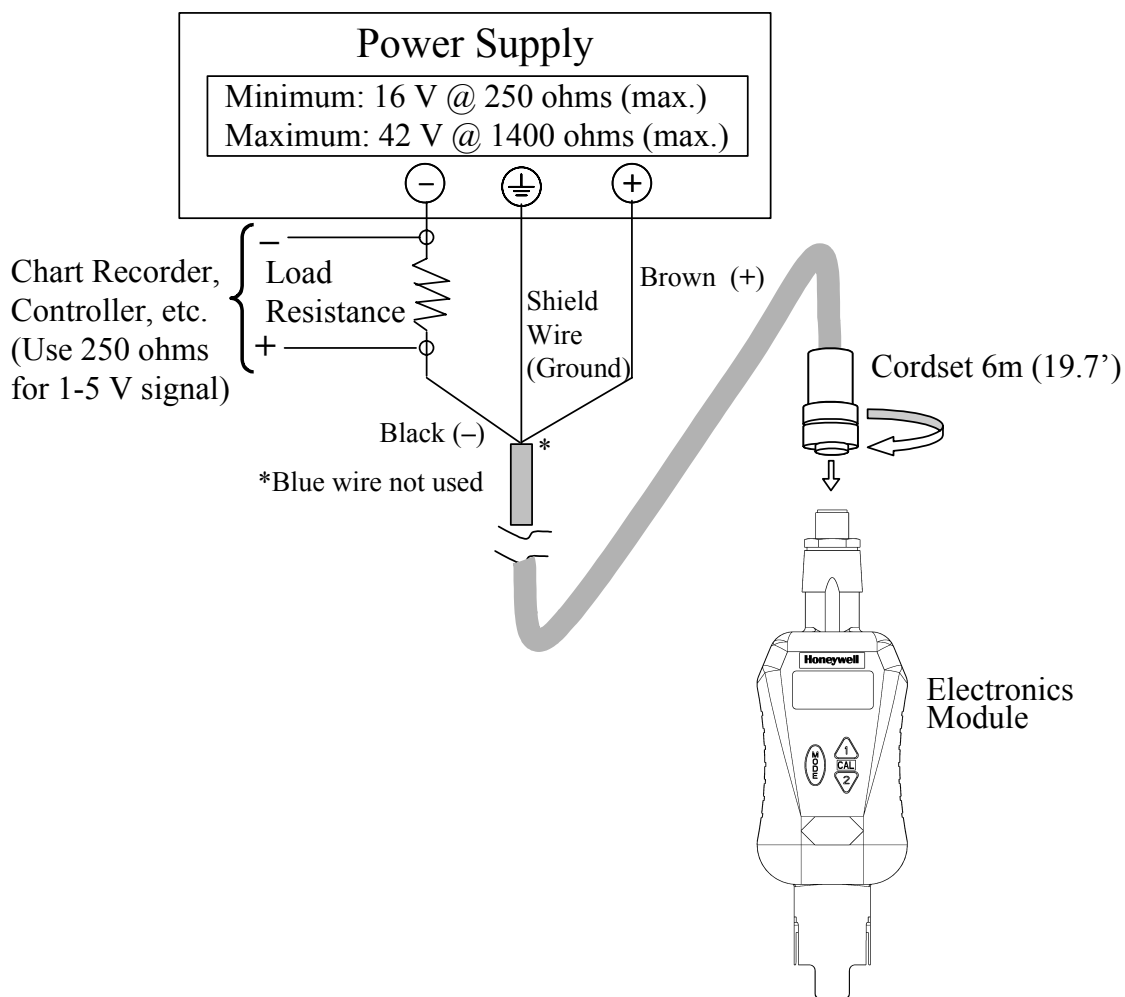


Figure 2-1 Cordset Connection and Wiring

2.1.2 Field Wiring Connector with customer supplied cable

Refer to Figure 2-2. The field wiring connector supports customer supplied cable with an outer diameter of 4-6mm, 2-wire twisted shielded pair.

Table 2-1 Assembly and Wiring Procedure for Field Wiring Connector

Step	Procedure
1	Disassemble field wiring connector a) Unscrew parts to separate pressure screw, clamp type cage, gasket, housing and female insert.
2	Insert customer supplied cable through connector parts a) Slide pressure screw over skin and tinned customer cable (note orientation). b) Slide clamp type cage over cable (note orientation). c) Slide gasket over cable. d) Slide housing over cable (note orientation).
3	Connect wires to pins Look closely at end of female insert to locate pin numbers. Connect positive wire to pin 1 and negative wire to pin 4. Remaining wires and female insert pins 2 and 3 are unused.
4	Assemble field wiring connector a) Screw female insert to housing until female insert's o-ring is compressed. b) Slide clamp type cage/gasket into housing. c) Thread pressure screw into housing until ¼ turn past finger tight.
5	Connect cable to power supply Wire the other end of the Output cable to a 16-42 Vdc source as indicated in Figure 2-1. Note: your wire colors may be different.

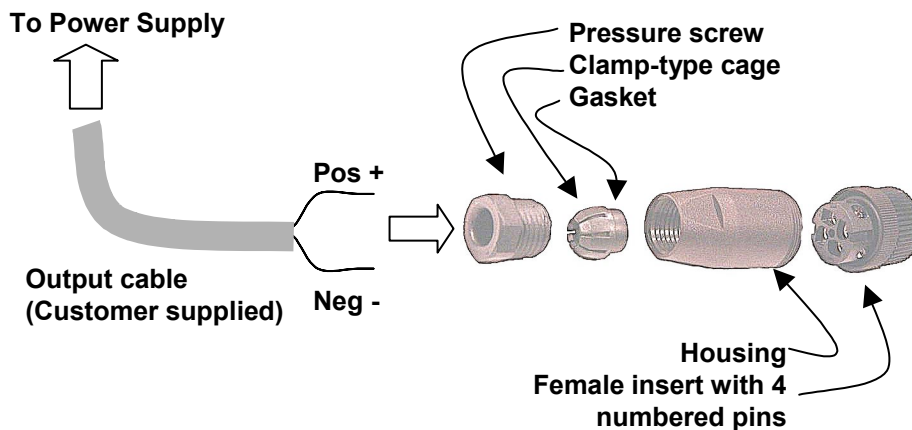


Figure 2-2 Field Wiring Connector

2.2 Integral Mounting

Table 2-2 Integral Mounting Procedure for ORP Electrodes

Step	Procedure
Connect Electrode to Pipe and Electronics Assembly (Figure 2-3)	
1	Screw the electrode into the pipe tee (3/4 " NPT thread). Make sure that the final position of the installed electronics module allows the display to be easily viewed by plant personnel.
2	Align the slots in the electronics module with those in the electrode and press down to connect the electronics to the electrode.
3	Tighten the locking screw on the bottom rear of the electronics module.

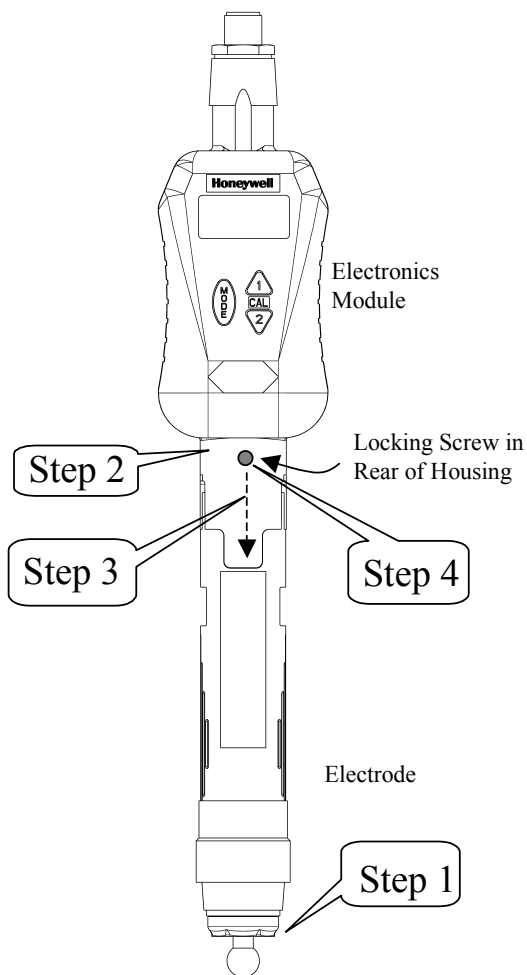


Figure 2-3 Integral Mounting

2.3 Remote Mounting

When the DL422 is specified with Table II = 3, the Remote Connector Assembly (part number 51500768-002) is supplied loose for connection of the Meredian II ORP electrode cable to the DL422 module. Table 2-3 gives the mounting procedure.

Table 2-3 Remote Mounting Procedure for ORP Electrodes

Step	Procedure (Refer to Figure 2-4 and Figure 2-5)
1	Turning counterclockwise, remove strain relief/cover combination from the remote connector assembly.
2	Loosen and remove compression cap from strain relief fitting. Carefully push cable end through cap and strain relief fitting so that these parts are strung back along cable jacket.
3	Connect cable leads as follows: Terminal 1 = Black Reference Lead Terminal 2 = 100K ohm resistor (pre-installed by Honeywell) Terminal 3 = 100K ohm resistor (pre-installed by Honeywell) Terminal 4 = Shield Terminal 5 = 1 Megohm resistor (pre-installed by Honeywell) Terminal 6 = Red Measuring Lead and 1 Megohm resistor (pre-installed by Honeywell)
4	Slide cover along cable and tighten by hand onto the remote connector assembly.
5	Slide cap along cable and tighten onto cable jacket with small wrench until cable cannot slide within strain relief rubber bushing.
6	Remove red protective vinyl boot from opposite end of connector assembly.
7	Apply a thin film of silicon grease on the ID of the electronics module's electrode mounting cavity.
8	Plug remote connector assembly into DL422 module aligning polarity tab of module housing and mating groove on connector.


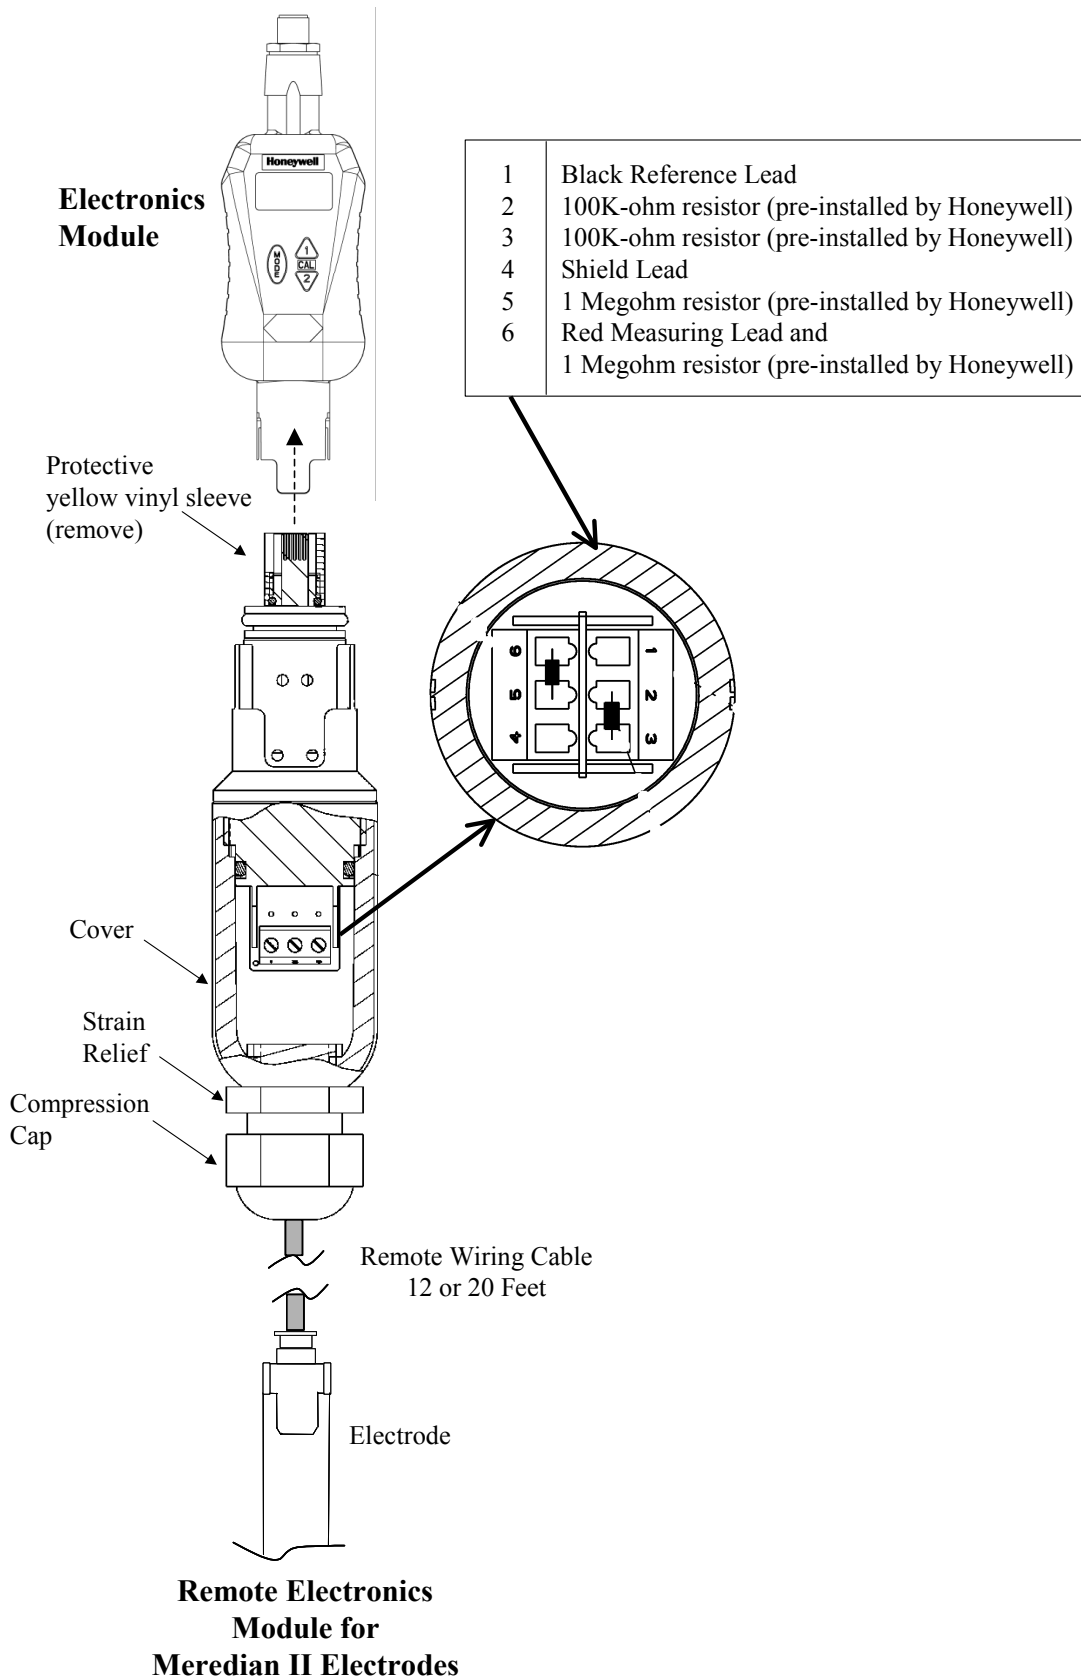


Figure 2-4 Remote Mounting

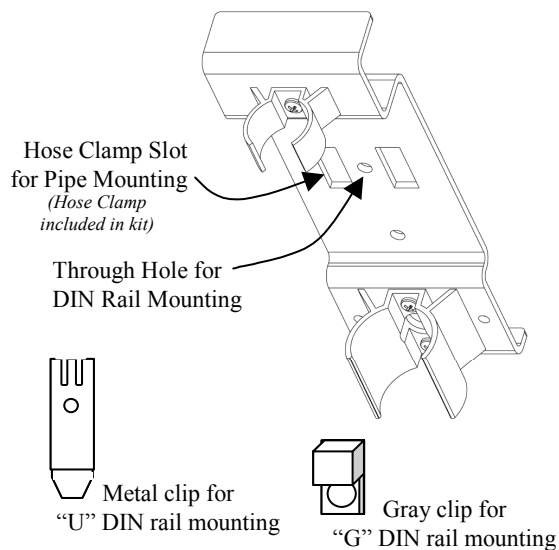

Mounting Kit

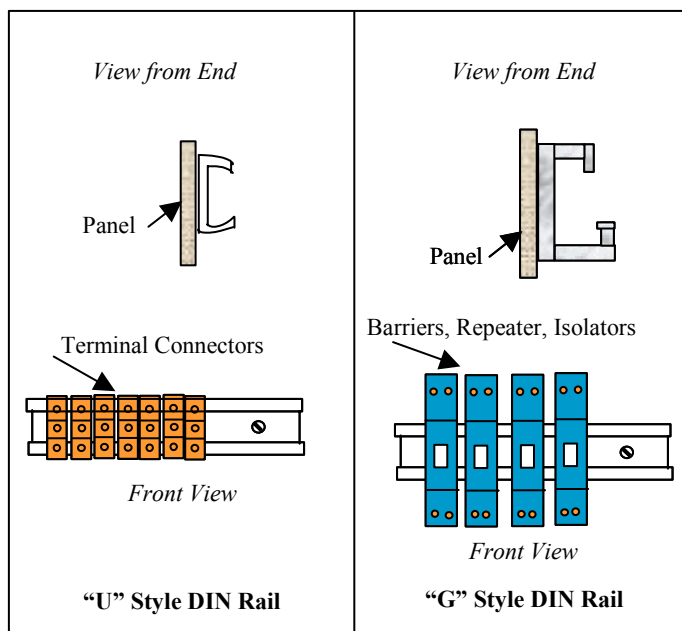


Figure 2-5 Remote Mounting Hardware

2.4 Conduit connections

The DirectLine provides a male $\frac{1}{2}$ " NPT thread to accommodate a customer conduit connection. Use $\frac{1}{2}$ " conduit coupling (min. 38.1mm (1.5") long) on DL conduit connection to clear cordset connector. Conduit can not be used with field wiring connector due to size restriction.

Do not exceed 200in-lb. torque when attaching fixed piping.

Use wrench flats provided under the $\frac{1}{2}$ " NPT threads to support the DirectLine during installation.

3. Configuration

3.1 Overview

Configuration Parameters

Set Up consists of configuring the following functions:

- **Noise Suppression Frequency Selection** – Selection of 50 Hz or 60 Hz. Defaults to 60 Hz at unit reset.
- **Output Configuration** – The following Output Configuration functions can be selected:
 - **0 % Range** 0 % Range values can be adjusted within a range of –1600 mV to +1600 mV in 10 mV increments.
 - **100 % Range** 100 % Range values can be adjusted within a range of –1600 mV to +1600 mV in 10 mV increments.
 - **0 % Calibration** Output current can be typically adjusted to within a range of 3.80 mA to 4.40 mA.
 - **100 % Calibration** Output current can be typically adjusted to within a range of 19.60 mA to 20.40 mA.

Table 3-1 provides steps and entry information for the complete configuration sequence.

3.2 Configuration Set Up Procedure

ATTENTION:

In Table 3-1, under the **Press** column:




- **Hold** means to hold the button down until the display changes.
- **Momentarily** means to press and release the indicated button.










From the Online ORP display, follow this procedure.

ATTENTION:

If no key is pressed for 60 seconds, the display will abort the entry mode and default to Online Display.

Table 3-1 Configuration Set Up Procedure

Step	Operation	Press	Display
1	Enter Noise Suppression Frequency	MODE Hold	nSUP (for 1 second) then, (Noise Suppression Frequency Selection)
	Edit Noise Suppression Frequency	MODE Hold	Flashing Display – You are now in EDIT mode (Value of current Frequency selection)
	Select desired Frequency	 Momentarily	To select 50 Hz or 60 Hz (default)
	Save the Noise Suppression Frequency	MODE Momentarily	Selection for frequency
2	Enter Output Configuration	MODE Momentarily	OutC Enter Output Calibration
	0 % Range Value Selection	 Momentarily	rnGL (for 1 second) then, (value of current 0 % Range Value Selection)
	Edit 0 % Range Value Selection	MODE Hold	Flashing Display – You are now in EDIT mode Value of current 0 % selection)
	Select desired 0 % ORP Value	 Momentarily	Selected 0 % ORP Value in 10 mV increments Range: –1600 to +1600 mV (default –1600 mV)
	Save the New 0 % Range Value	MODE Momentarily	(New Value)

Step	Operation	Press	Display
3	100 % Range Value Selection	 Momentarily	rnGH (for 1 second) then, (value of current 100 % Range Value Selection)
	Edit 100 % Range Value Selection	MODE Hold	Flashing Display – You are now in EDIT mode (value of current 100 % selection)
	Select 100 % ORP Value	  Momentarily	Selected 100 % ORP Value in 10 mV increments Range: –1600 to +1600 mV (default 1600 mV)
	Save the New 100 % Range Value	MODE Momentarily	(New Value)
4	0 % Calibration	 Momentarily	AdJL
	Adjust 0 % Calibration	MODE Hold	AdJL (flashes) – You are now in EDIT mode Range: 3.80 to 4.40 mA typically (default 4.00 mA)
		  Momentarily	+AdJL (increments value) –AdJL (decrements value)
	Save 0 % Calibration	MODE Momentarily	AdJL
5	100 % Calibration	 Momentarily	AdJH
	Adjust 100 % Calibration	MODE Hold	AdJH (flashes) – You are now in EDIT mode Range: 19.60 to 20.40 mA typically (default 20.00 mA)
		  Momentarily	+AdJH (increments value) –AdJH (decrements value)
	Save 100 % Calibration	MODE Momentarily	AdJH
6	Return to Online Display	MODE Momentarily	Returns to Online Display

4. Calibration

4.1 Calibration Diagnostics

Introduction

The manual standardization adjustment changes the zero offset diagnostics used by this system. This value is viewed as read-only information. It is good practice to observe this value after calibration. Monitoring the value over time will help you predict when the electrode will need to be replaced.

Zero Offset Value

When Online ORP value is displayed, **PRESS** ▲ button momentarily to display the current **Zero Offset value**.

Zero Offset is non-volatile and is initialized to 0 mV at unit reset.

It has a range of ± 120 mV and it is updated after each calibration.

60 Second Timeout

If no key is pressed for 60 seconds, the display will abort the entry mode and default to Online Display.

4.2 Calibration Diagnostic Reset

Introduction

When a new electrode is installed, the indicated ORP will use the zero offset value from the previous calibration. Depending on the condition of the replaced electrode, the difference between the known and indicated ORP of the new electrode may vary as much as several millivolts. A calibration on the new electrode will correct this difference.

Zero Offset ORP Value

- a) Momentarily press ▲ to view the Zero Offset value. From this display press and hold the ▲ button until the Zero Offset ORP value resets to factory default "0".
- b) Press MODE button, or wait 60 seconds, to return to Online ORP.

4.3 Calibration

Overview

Calibration consists of the following function:

- **Calibrating the Zero (Standardization)** – Manual ORP calibration. In manual calibration, you can select a new ORP value above or below the recognized live ORP value.

ORP Calibration Using Reference Solution

Recommended to adjust for changes in electrode potential over time

An ORP measuring system can be checked by measuring a solution having a known oxidation-reduction potential, then adjusting the sensor to match. Although a reference solution provides only an approximation of ORP potential, the system can be adjusted periodically to compensate for changes in electrode potential over time.

Materials

The materials required to use the ORP standardization method are:

- A solution with a known oxidation-reduction potential. (See “Instructions for preparing solution” below.)
- A container for the solution, large enough to immerse the electrode to measuring depth.
- Distilled or de-ionized water to rinse the electrode.

Instructions for preparing solution

To prepare an ORP standardization solution, dissolve 0.1 g of quinhydrone powder (available as Honeywell part number 31103015 for a 2 oz. bottle) in 5 cc of acetone or methyl alcohol (methanol). Add this to not more than 500 cc of a standard pH reference solution (buffer), about 1 part saturated quinhydrone to 100 parts buffer solution. The oxidation potential of this solution is listed below for several temperatures. The polarity sign shown is that of the measuring element with respect to the reference element.

These solutions are unstable and should be used within eight hours of preparation.

All mV values in Table 4-1 have a ± 30 mV tolerance.

Table 4-1 Oxidation-Reduction Potential of Reference Solutions at Specified Temperature

pH Buffer Solution (Honeywell Part Number)	Temperature		
	20 °C	25 °C	30 °C
4.01 @ 25 °C (31103001)	267 mV	263 mV	259 mV
6.86 @ 25 °C (31103002)	100 mV	94 mV	88 mV
7.00 @ 25 °C (not available from Honeywell)	92 mV	86 mV	80 mV
9.00 @ 25 °C (not available from Honeywell)	-26 mV	-32 mV	-39 mV
9.18 @ 25 °C (31103003)	-36 mV	-43 mV	-49 mV





Calibration Procedures

ATTENTION:

In Table 4-2, under the **Press** column:

- **Hold** means to hold the button down until the display changes.
- **Momentarily** means to press and release the indicated button.

Table 4-2 Zero (Standardization) Calibration Procedure

Step	Operation	Press	Display
1	Enter Zero (Standardization) Calibration	 Hold	CAL1
2	Do Sample (Manual) Calibration	 Momentarily	SCAL for one second, then displays Live ORP Value.
	Edit ORP Value	 or  Momentarily	To edit ORP Value (<i>Flashing Display</i>)
	Save New ORP Value	MODE Momentarily	ORP Value is saved and goes to Online Display .

5. Operation

5.1 Displays

Overview

The DirectLine® DL422 displays the ORP value and Zero Offset ORP value. The table below describes these parameters.

Table 5-1 Online Parameter Descriptions

Parameter	Description
Online ORP	Measured ORP expressed with fixed whole number precision. Range: -1600 mV to +1600 mV
Zero Offset ORP Value	Zero Offset ORP value expressed with whole number precision. Range: -120 mV to +120 mV

The default display and home position is the **Online ORP** display. It appears when:

- *The unit is powered up*
- *No button presses for 60 seconds*
- *The Mode button has been pressed during Zero (Standardization) calibration (**Sample Calibration**)*
- *The Mode button has been pressed during a configuration edit*


The measurement and display of ORP is updated at a rate of 500 ms.

ATTENTION:

In Table 5-2, under the **Press** column:

- **Momentarily** means to press and release the indicated button.

Table 5-2 Display Navigation Procedure

Step	Operation	Press	Display
1	View Online ORP value	MODE Momentarily	<i>(measured ORP)</i>
2	View Zero Offset ORP value	 Momentarily	<i>(Zero Offset ORP)</i>
3	Return to home position	MODE Momentarily	<i>(measured ORP)</i>

5.2 Diagnostic Error Messages

When a diagnostic error or status condition occurs, the Online Display alternates between measured ORP and a text message.

Table 5-3 Online Diagnostic Errors

What you see	What it is	What to do
CNFG	Data error detected.	Reset unit or cycle power. Second occurrence will show FALT.
FALT	Unit electronics are defective.	Replace electronics module.
<i>These errors may occur when online ORP is displayed.</i>		
O HI	Measured ORP is > 1600 mV	Bring process within limits
O LO	Measured ORP is < -1600 mV	Bring process within limits
PRBE	Probe is defective, removed from process, or not connected. Forces the output to burnout level (approximately 21.8 mA).	Check probe, connection and presence of sample. When the source of the error is removed, the error will clear and the output will return to normal operation.
<i>This error may occur during probe calibration and abort the calibration process.</i>		
FAIL	This error message is preceded by the message "FAIL" ZRNG The Zero (Standardization) calibration failed due to a calculated Zero Offset value outside the range of -120 mV to +120 mV.	Press Mode to return to online display.

5.3 Unit Reset

Overview

Unit Reset initializes all of the DirectLine® Sensor’s calibration and configuration data to factory default values.

Procedure

- From the Online ORP display, press and hold the ▲ and ▼ buttons simultaneously until the “rSEt” appears on the display (**minimum of 10 seconds**).
- “rSEt” will remain on the display until reset is complete. Next, the firmware version number appears briefly and the unit then returns to the Online ORP display.

Table 5-4 Factory Default Values

Data	Default Values
Zero Offset	0 mV
Noise Suppression Frequency Selection	60 Hz
Output Configuration – 0 % Range Value	–1600 mV
Output Configuration – 100 % Range Value	1600 mV
Output Configuration – 0 % Calibration	4.00 mA typically
Output Configuration – 100 % Calibration	20.00 mA typically

6. Spare Parts

Part Number	Description
51452682-001	DirectLine® Sensor Module (Replacement Module)
51452683-001	6m cordset
51452684-001	Field Wiring Connector supports customer supplied cable (4-6 mm OD)
51500768-002	Remote Electrode Cable Connector Assembly– Includes O-rings, strain relief, and pre-installed resistors
51451371-001	Cable Strain Relief
51198302-006	Internal O-ring for Remote Electrode Cable Connector
31086221	External O-ring for Integral Meredian Electrode or Remote Electrode Cable Connector
51452655-001	Remote Mounting Kit for Wall, Pipe, or DIN Mounting
51452706-001	Locking screw (locks sensor module to electrode)

Cordset

The cordset connection is an M12 female type that can be purchased directly from Honeywell or from multiple vendors including:

Turck Industries

Part Number RKV4T-6/S618 for a 6 m cordset with a stainless coupling nut

Part Number RK4T-6/S618 for a 6 m cordset with a nickel plated coupling nut

Phoenix Contact

Part Number SAC-3P-5.0-PUR/M12FSSH Stainless for a 5m cordset with a stainless coupling nut

Part Number SAC-3P-5.0-PUR/M12FSSH for a 5m cordset with a nickel plated coupling nut

Field Wiring connector

The Field Wiring Connector is an all-plastic screw terminal M12 female type that can be purchased directly from Honeywell or from multiple vendors including:

Turck Industries

Part Number B8141-0 for a M12 field wiring connector that accommodates customer supplied cable.

Phoenix Contact

Part Number SACC-M12FS-4CON-PG7 for a M12 field wiring connector that accommodates customer supplied cable.

7. Sales and Service

For application assistance, current specifications, pricing, or name of the nearest Authorized Distributor, contact one of the offices below.

ARGENTINA

HONEYWELL S.A.I.C.
BELGRANO 1156
BUENOS AIRES
ARGENTINA
Tel. : 54 1 383 9290

ASIA PACIFIC

HONEYWELL ASIA
PACIFIC Inc.
Room 3213-3225
Sun Kung Kai Centre
N° 30 Harbour Road
WANCHAI
HONG KONG
Tel. : 852 829 82 98

AUSTRALIA

HONEYWELL LIMITED
5 Thomas Holt Drive
North Ryde Sydney
NSW AUSTRALIA 2113
Tel. : 61 2 353 7000
AUSTRIA

HONEYWELL AUSTRIA

G.m.b.H.
Handelskai 388
A1020 VIENNA
AUSTRIA
Tel. : 43 1 727 800

BELGIUM

HONEYWELL S.A.
3 Avenue de Bourget
B-1140 BRUSSELS
BELGIUM
Tel. : 32 2 728 27 11

BRAZIL

HONEYWELL DO
BRAZIL
AND CIA
Rua Jose Alves Da
Chunha
Lima 172
BUTANTA
05360.050 SAO PAULO
SP
BRAZIL
Tel. : 55 11 819 3755

BULGARIA

HONEYWELL EOOD
14, Iskarsko Chausse
POB 79
BG- 1592 Sofia
BULGARIA
Tel : 359-791512/
794027/ 792198

CANADA

HONEYWELL LIMITED
THE HONEYWELL
CENTRE
300 Yorkland Blvd.
NORTH YORK,
ONTARIO
M2J 1S1
CANADA
Tel. : 800 461 0013
Fax:: 416 502 5001

CZECH

REPUBLIC
HONEYWELL, Spol.s.r.o.
Budejovicka 1
140 21 Prague 4
Czech Republic
Tel. : 42 2 6112 3434

DENMARK

HONEYWELL A/S
Automatikvej 1
DK 2860 Soeborg
DENMARK
Tel. : 45 39 55 56 58

FINLAND

HONEYWELL OY
Ruukintie 8
FIN-02320 ESPOO 32
FINLAND
Tel. : 358 0 3480101

FRANCE

HONEYWELL S.A.
Bâtiment « le Mercury »
Parc Technologique de St
Aubin
Route de l'Orme
(CD 128)
91190 SAINT-AUBIN
FRANCE
Tel. from France:
01 60 19 80 00
From other countries:
33 1 60 19 80 00

GERMANY

HONEYWELL AG
Kaiserleistrasse 39
D-63067 OFFENBACH
GERMANY
Tel. : 49 69 80 64444

HUNGARY

HONEYWELL Kft
Gogol u 13
H-1133 BUDAPEST
HUNGARY
Tel. : 36 1 451 43 00

ICELAND

HONEYWELL
Hataekni .hf
Armuli 26
PO Box 8336
128 reykjavik
Iceland
Tel : 354 588 5000

ITALY

HONEYWELL S.p.A.
Via P. Gobetti, 2/b
20063 Cernusco Sul
Naviglio
ITALY
Tel. : 39 02 92146 1

MEXICO

HONEYWELL S.A. DE
CV
AV. CONSTITUYENTES
900
COL. LOMAS ALTAS
11950 MEXICO CITY
MEXICO
Tel : 52 5 259 1966

THE NETHERLANDS

HONEYWELL BV
Laaderhoogtweg 18
1101 EA AMSTERDAM
ZO
THE NETHERLANDS
Tel : 31 20 56 56 911

NORWAY

HONEYWELL A/S
Askerveien 61
PO Box 263
N-1371 ASKER
NORWAY
Tel. : 47 66 76 20 00

POLAND

HONEYWELL Sp.z.o.o
Ul Domainewksa 41
02-672 WARSAW
POLAND
Tel. : 48 22 606 09 00

PORTUGAL

HONEYWELL
PORTUGAL LDA
Edificio Suecia II
Av. do Forte nr 3 - Piso 3
2795 CARNAXIDE
PORTUGAL
Tel. : 351 1 424 50 00

REPUBLIC OF IRELAND

HONEYWELL
Unit 1
Robinhood Business
Park
Robinhood Road
DUBLIN 22
Republic of Ireland
Tel. : 353 1 4565944

REPUBLIC OF SINGAPORE

HONEYWELL PTE LTD
BLOCK 750E CHAI
CHEE ROAD
06-01 CHAI CHEE IND.
PARK
1646 SINGAPORE
REP. OF SINGAPORE
Tel. : 65 2490 100

REPUBLIC OF SOUTH AFRICA

HONEYWELL
Southern Africa
PO BOX 138
Milnerton 7435
REPUBLIC OF SOUTH
AFRICA
Tel. : 27 11 805 12 01

ROMANIA

HONEYWELL Office
Bucharest
147 Aurel Vlaicu Str.,
Sc.Z.,
Apt 61/62
R-72921 Bucharest
ROMANIA
Tel : 40-1 211 00 76/
211 79

RUSSIA

HONEYWELL INC
4 th Floor Administrative
Building of AO "Luzhniki"
Management
24 Luzhniki
119048 Moscow
RUSSIA
Tel : 7 095 796 98 00/01

SLOVAKIA

HONEYWELL Ltd
Mlynske nivy 73
PO Box 75
820 07 BRATISLAVA 27
SLOVAKIA
Tel. : 421 7 52 47 400/
425

SPAIN

HONEYWELL S.A
Factory
Josefa Valcarcel, 24
28027 MADRID
SPAIN
Tel. : 34 91 31 3 61 00

SWEDEN

HONEYWELL A.B.
S-127 86 Skarholmen
STOCKHOLM
SWEDEN
Tel. : 46 8 775 55 00

SWITZERLAND

HONEYWELL A.G.
Hertistrasse 2
8304 WALLISELLEN
SWITZERLAND
Tel. : 41 1 831 02 71

TURKEY

HONEYWELL
Otomasyon ve Kontrol
Sistemlen San ve Tic
A.S.
(Honeywell Turkey A.S.)
Emirhan Cad No 144
Barbaros Plaza C. Blok
Kat 18
Dikilitas 80700 Istanbul
TURKEY
Tel : 90-212 258 18 30

UNITED KINGDOM

HONEYWELL
Unit 1,2 &4 Zodiac House
Calleva Park
Aldermaston
Berkshire RG7 8HW
UNITED KINGDOM
Tel : 44 118 906 2600

U.S.A.

HONEYWELL INC.
INDUSTRIAL PROCESS
CONTROLS
1100 VIRGINIA DRIVE
PA 19034-3260
FT. WASHINGTON
U.S.A.
Tel. : 1-800-343-0228

VENEZUELA

HONEYWELL CA
APARTADO 61314
1060 CARACAS
VENEZUELA
Tel. : 58 2 239 0211

Honeywell

Industrial Measurement and Control
Honeywell
1100 Virginia Drive
Fort Washington, PA 19034